



## Step 1

Prepare and position the brackets

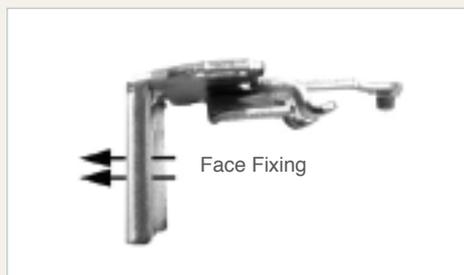

Your roman blind will include the correct number of brackets for the width of your blind. These brackets are suitable for **face fixing** directly to the window or wall, or **top fixing** to the underside of the lintel above the window.

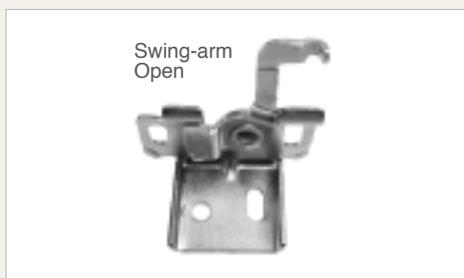

The brackets have a '**swing-arm**' mechanism. Before using the brackets make sure the swing-arm moves freely. Move the swing-arm into the 'open' position.



Plan where you will position the brackets on the blind rail. A bracket should be positioned at either end of the rail but at least 50mm in from the end. Position any other brackets along the rail spaced as equally as possible. When you have decided where each of your brackets will be located measure the position of each of the brackets along the blind track.

## Step 2

Fixing the brackets

You will have decided how you want to fit your blind when you measured for it and when you ordered it. Please follow the corresponding instructions below.

### Option 1

Inside the window recess - **Recess Fitting**

Carefully select fixings appropriate to the material you want to fix to. This will usually be the window frame or lintel. Using the measurements you took when positioning your brackets on the blind rail, mark the positions of your brackets taking care to make sure that they are level with each other and that the blind will be located centrally at the window. If there are window handles present which will impede the operation of the blind then it may be better to fix the brackets by top fixing to the lintel rather than fixing directly to the window frame. Make sure that the brackets are positioned far enough away from the window frame so that the fabric will not be impeded when lowered. Fix the brackets securely but do not overtighten.

### Option 2

Outside the window recess - **Exact Fitting**

Carefully select fixings appropriate to the material you want to fix to. This will usually be the wall. Using the measurements you took when positioning your brackets on the blind rail, mark the positions of your brackets taking care to make sure that they are level with each other and that the blind will be located centrally at the window. Fix the brackets securely but do not overtighten.

### Step 3


## Fitting the blind

Unravel the control chain and remove any elastic bands. Hold the blind horizontally in front of you.



Offer up the blind rail to the brackets. Hook the lip on front edge of the rail over the protruding lips on the brackets.

Then push the rail upwards into the brackets.

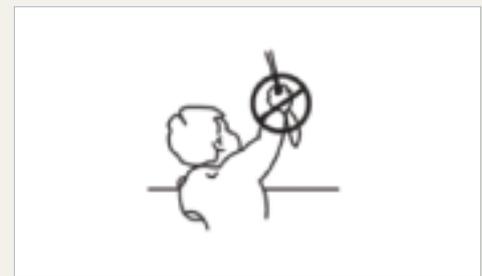


Whilst holding the blind in this position, push the swing arm on the bracket into the closed position. This will lock under the lip of the rear of the rail and the blind will now be held in position.

You are now ready to fit the child safety device.

**WARNING** - Young children can be strangled by loops in pull chords, chains, tapes and inner cords that operate the product. To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop.



## Step 4 Fit the Child Safety Device - Cord Tidy

The Cord tidy will be attached to the chain. The Cord Tidy is a two piece device and will arrive with a disposable red tab fitted to it. The Cord Tidy **MUST** be fitted to the wall as follows. Children can strangle if this safety device is not installed. Always use this device to keep the chain out of reach of children.

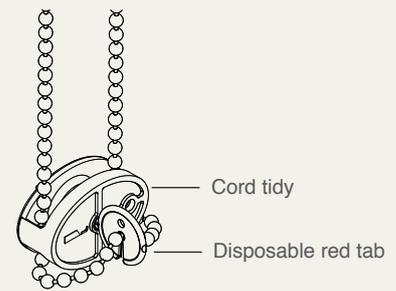


- 1 Remove the disposable red tab by disengaging it from the chain and then pull out the disposable red tab.

- 2 Position the cord tidy to the wall at the furthest distance below the roller tube adding appropriate tension to the chain and mark its location.

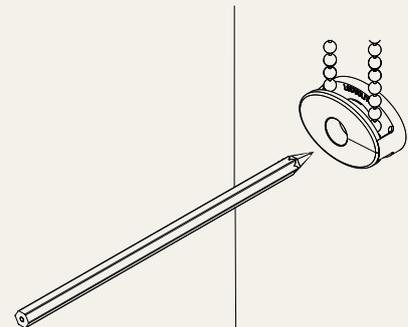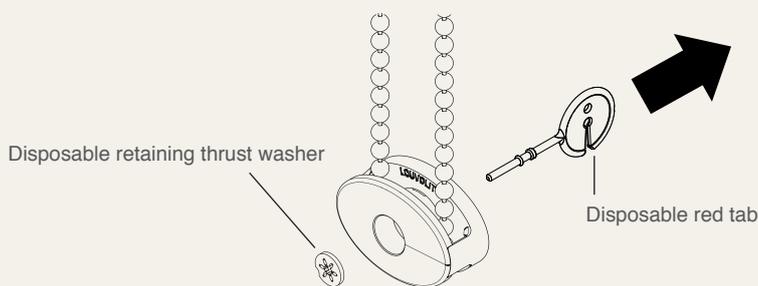

- 3 Split the cord tidy and mark the remaining offset hole position before drilling and plugging both location holes if necessary. Screw into the offset hole to fix the back piece of the cord tidy to the wall.

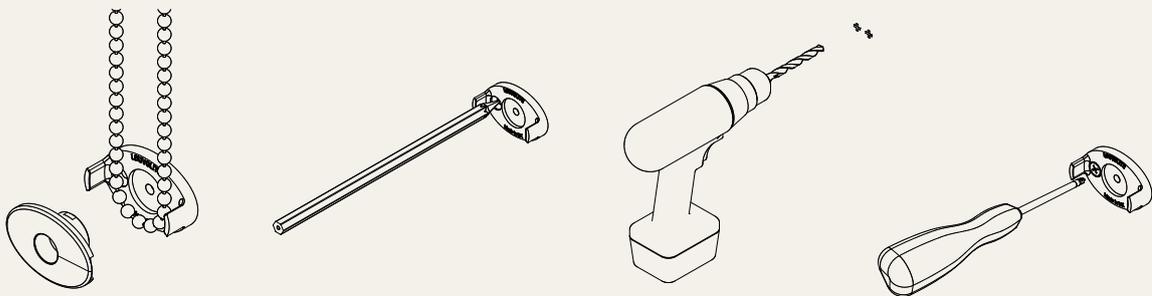

- 4 Re-assemble the cord tidy with the chain and fix it in previously marked position with a screw through the centre hole.

- 5 Push fit a cover cap over the screw hole opening.

